

JUMP STARTER PFP 1000

TECHNICAL CHARACTERISTICS

- Voltage: 12v
- Battery: 34ah/ PC950 HAWKER-ODYSSEY U.S.A.
- Amp. Cranking: 950ah (5 sec.)
- Amp. Maximums: 1700ah
- 1000ah clamps
- 25mm flexible cable
- Polarity change warning
- Current surge protector
- Internal battery checker
- Vehicle alternator operation indicator
- Charger of 3.6 a/h 5 stages
- Weight: 14kg
- Dimensions: Length 300mm, Width 150mm, Height 280mm
- Work temperature: -40°C/+45°C



rasmus
MARINE

INSTRUCTIONS FOR USE AND SAFETY

BEFORE USING THE DEVICE FULLY CHARGE IT FOR 12H

- Firmly place the clamps on the terminals respecting the polarity and turn the cut-off key. The LED lights will illuminate indicating the state of charge of the starter battery and then start the vehicle.
- You can press the Test button to check the charge status of the internal battery.
- If the clamps have not been placed respecting the polarity, the starter beeps. In this case DO NOT turn the cut-off key in any case.
- In diesel vehicles, wait for the heaters to act.
- Wait a few minutes with the engine running to allow the battery to partially recharge.
- This unit is equipped with an electronic surge voltage suppressor device.
- Check that the BLUE LED lights up, in this way we will know that the alternator works. If it does not turn on, turn off the engine before unplugging the device.
- Use the supplied charger for optimal charging of the device. Always keep batteries charged.

WARRANTY

This device is guaranteed against manufacturing defects for 24 months from the invoice date, this will be proof of the guarantee and must be presented to examine any component of the device. The batteries must arrive with more than 12 volts since if it is lower it has not been properly charged. **ALL THE COMPONENTS OF THE STARTER CAN BE PURCHASED FROM YOUR REGULAR DEALER.**

MODEL AVAILABLE WITH STAINLESS STEEL HOUSING

PFP 1000 SUITABLE FOR 100% OF VEHICLES INCLUDING V6 DIESEL AND PETROL ENGINES AND V8-V10-V12 ENGINES.